

# *Welcome to Kobo!*



Tap to turn  
the page.

Congratulations on your new Kobo eReader Touch. Please take our quick tour to learn the basics of your eReader.

# Home

Tap the Home menu for your Library, the Store, Help and Reading Life.

These are your 5 most recent books.

Tap to find your next read.

Press to return to the Home Page.



# Your Library

Tap here to see your library shelves.

Tap here to sort your books.

Tap here to choose from 1 of 3 views.

Tap this icon to search your library.




# *Reading a Book*

Swipe right or tap here to page back.

Tap here to bring up the options menu.

Swipe left or tap here to page forward.

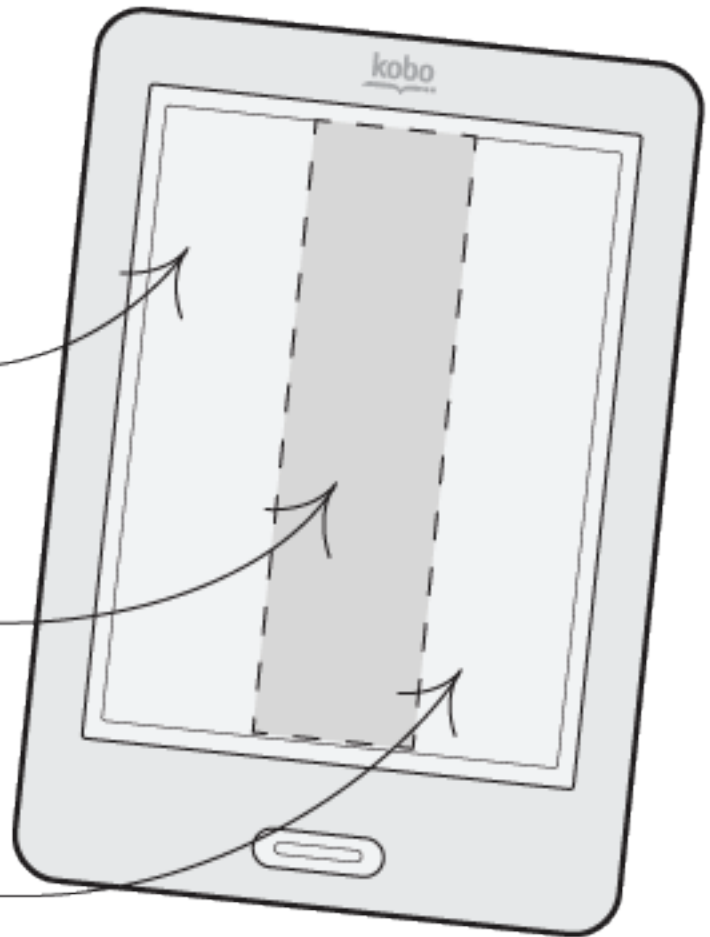

Look for this icon to change the font size or font type.




Tap to access the Table of Contents and more.




Use the book browser to jump pages and chapters.

# Annotations

Tap and hold any word for a moment to bring up the selection tool.

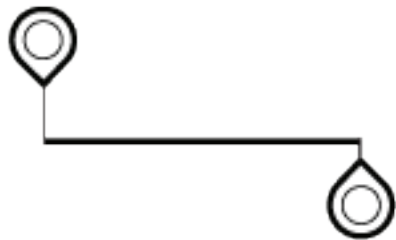

Drag the circles to select a word or phrase.

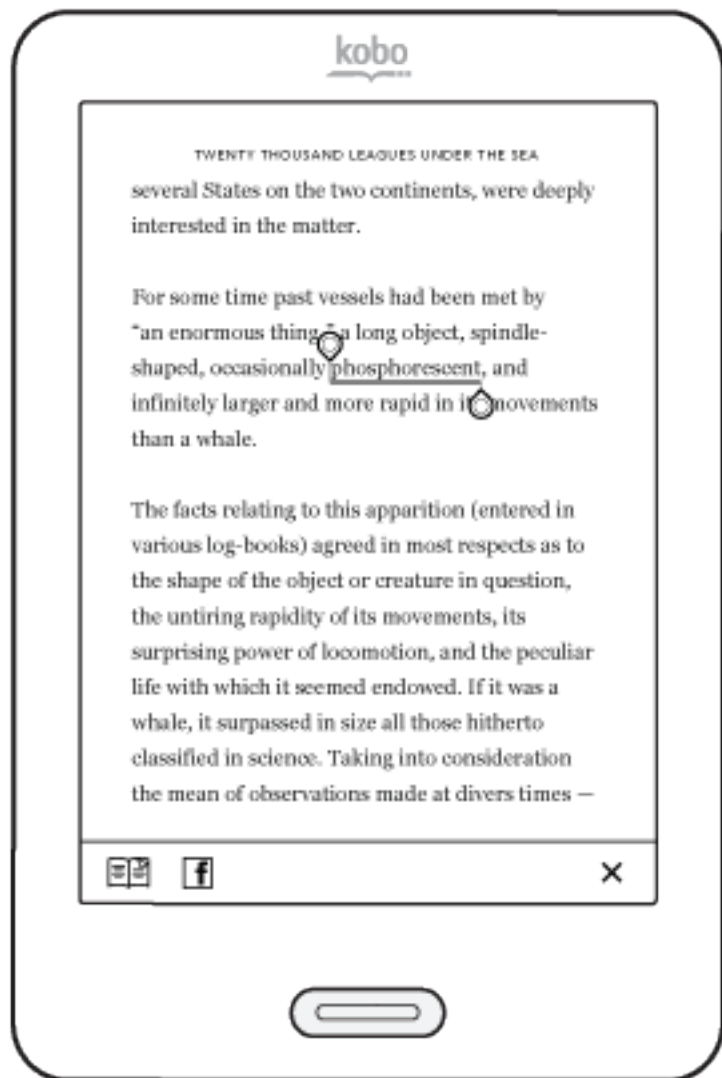


Share your selection to Facebook.



Use the dictionary, save highlights, search in your book, add a note and more.

# *Sleep and Power Off*

**TO SLEEP:** Slide the Power button to the right and release quickly.

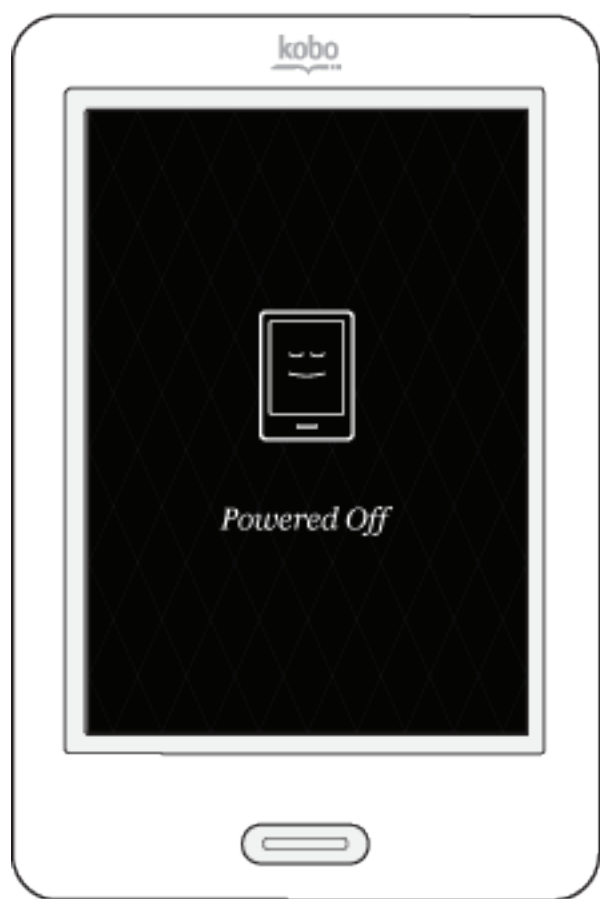

**TO TURN OFF:** Slide the Power button to the right and hold until the Off screen appears.

# *Charge Your eReader*

This tells you when to charge your eReader:




EMPTY - PLEASE CHARGE!



CHARGING



FULLY CHARGED

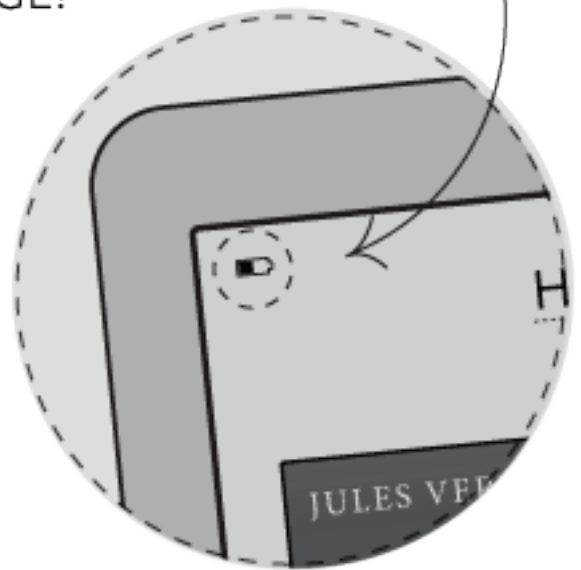

To charge your eReader, plug it into your computer using the USB cable provided or use a standard USB wall adapter.



# *Learn More*

On the Home Page, tap the Help icon to access comprehensive user guides.



**Need Help?**  
[www.kobo.com/help](http://www.kobo.com/help)